



Lingmo



Translation User Manual

Don't Translate it. Lingmo it!

Leading edge language translation technology for the global market

Contents

- About T2T Translation Software
- Your Time2Translate
- Charging your Time2Translate Smartwatch
- Using T2T Software

Accessories included with Time2Translate

- 1 x USB Charger
- 1 x Small screw driver (Lifestyle)



Lifestyle model used in this user guide

About T2T Translation Software

- Time2Translate is an independent wearable translation smartwatch
- The T2T translation software translates 29 languages across spoken and written communication in real time
- Translates 2-way conversations
- Translations are above 85% accurate
- Translates effortlessly and effectivity in an average of 5 seconds
- Translation technology can detect nuances and dialect
- Compatible with Bluetooth devices – Speakers and Earphones
- Operated via a Nano SIM Card without relying on Wi-Fi Connectivity
- Android Operating System

Languages

- Arabic
- Catalan
- Chinese
- Czech
- Danish
- Dutch
- English (UK) and (US)
- Finnish
- French
- Galicia
- German
- Greek
- Hebrew
- Hindi
- Hungarian
- Indonesian
- Italian
- Japanese
- Korean
- Norwegian
- Polish
- Portuguese
- Portuguese (Brazilian)
- Russian
- Slovak
- Spanish
- Swedish
- Thai
- Turkish

How the guide works

- The guide will show you a step by step guide on how to operate the T2T face to face translation software
- In addition to this user guide there is also a video that explains how to operate Time2Translate.
- www.lingmointernational.com

Lifestyle

Speaker/Microphone



Power/ Lock and Back button

Camera

Executive

Speaker/Microphone



Power and Lock Button

Back button

Heart Rate Monitor



Magnetic Charger Connection point

SIM card port

Charging your Time2Translate Smartwatch



The magnetic USB charger connects to the rear side of device.

Simply lay the charger over the charging panel and it will connect



Lifestyle – Active Use 4-6 Hours, Intermittent Use 6-10, Hours Standby 32 Hours (Flight Mode)

Executive – Active Use 6-8 Hours, Intermittent Use 10-12, Hours Standby 40 Hours (Flight Mode)

Insert a SIM card to operate your Translation Software



Nano SIM



Tool for Lifestyle only

Android Features



MAKE AND RECEIVE CALLS



SEND AND RECEIVE SMS



SEND AND RECEIVE EMAILS



BROWSE THE INTERNET



FITNESS TRACKING

ADDITIONAL FEATURES:

- ADDRESS BOOK
- MUSIC PLAYER
- SOUNDS RECORDER
- CALENDAR
- CLOCK
- TO DO LIST
- EMERGENCY ALERTS
- DOWNLOADS
- FILE MANAGER

Accessing T2T Software



Access T2T software by pressing the icon on the watch face

Using T2T Software

- 

1. Open T2T Watch app
- 

2. Press the language icon to select the languages you and the receiver will be speaking
- 

3. Select the language you will speaking into the watch
- 

4. Select the language of the receiver
- 

5. Press the star to add language combination into your favourites

Press the circling arrows to switch the to and from languages

Press the tick to confirm your languages
- 

6. Once on the translation screen, hold your finger on the language you wish to speak, and speak, release once finished speaking

Using Time2Translate Software con't

7.



The translation will come up in text at the bottom of the screen

10.




The translation will come up in text at the bottom of the screen

8.



The translation will be heard from the speaker

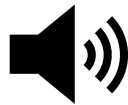

11.



The translation will be heard from the speaker



9.



The recipient can then reply by pressing their flag and speaking into the smartwatch



12.



Press the top button to go back to the menu screen

Menu Icons - Favourites

13.



Press the star icon to access your favourite language combinations which you have saved

14.



The screen will open up so you can start a conversation and start translating

15.



The screen will open the translate screen so you can start your conversation



16.



Press the chat icon to access your language combinations if you have already chosen your language set up previously

17.



Press the desired favourite language combination

18.



Press the top button to go back to the menu screen

Menu Icons - History



19.



Press the history icon to access your conversation history

20.



Press the desired translated history conversation

21.



The screen will show the spoken translated conversation in text format